


## /// Plug-in industrial relay with 2 C/O contacts, magnetic arc blow-out

Rugged plug-in relays for extreme reliability, within long endurance applications and harsh environments

### CU/CP-G/W

Instantaneous relay

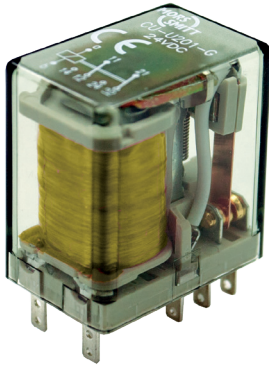

(Picture CU-U201-G is shown)

### Description

Miniature industrial relay with two change-over contacts. The contacts are weld-no-transfer contacts: they are mechanically forced in the same position. Standard with high insulation because of flash barrier. Relay for plug-in mounting (CU version) or for PCB mounting (CP version).

Optional built-in LED (red or green colour) to indicate presence of power supply and energizing of the coil (only CU).

The construction of the relay and choice of materials makes the CU/CP-G/W relay suitable to withstand corrosive atmospheres, low and high temperatures, shock & vibrating and dry to very humid environments.

With a very compact design and a wide range of sockets, the CU/CP-G/W relay is an easy and flexible solution to use.


### Application

These relays are designed for industrial applications where available space is limited.


### Features

- Miniature plug-in / PCB relay
- Instantaneous 2 C/O contacts
- Weld-no-transfer contacts
- Optional built-in LED (red or green colour)
- CU/CP-G: DC coil, CU/CP-W: AC coil
- Flat, square and tin plated relay pins for excellent socket connection / PCB mounting pins
- Wide range sockets
- Transparent cover
- High insulation because of flash barrier
- Optional positive mechanical keying relay to socket

### Connection diagram

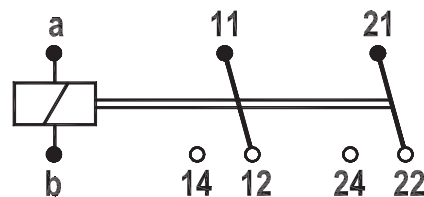

### Timing diagram

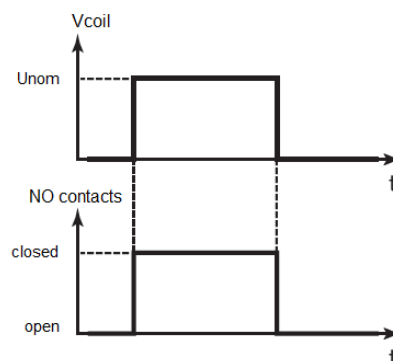

### Compliance

IEC 61810  
 IEC 60947  
 IEC 60947-5-1  
 IEC 60255  
 CE


## Instantaneous relay CU/CP-G/W

### Options

- Gold plated contacts
- Red LED\*
- Green LED\*

\* Only CU version

### Dimensions (mm)

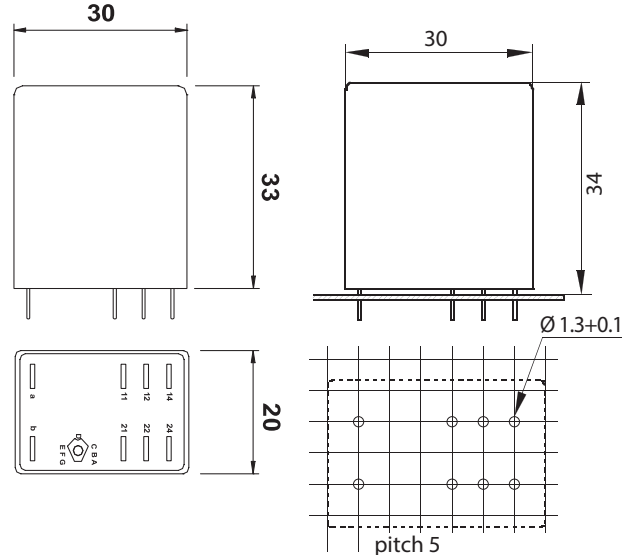

CU version

CP version

Hole size:  $\varnothing$  1.45...1.90 mm,  $\varnothing$  1.5 mm recommended  
 Spot size: minimum  $\varnothing$  2.4 mm,  $\varnothing$  3.2 mm recommended

### Sockets

Terminal connection	Mounting	
	Wall / rail mount	PCB
Screw	V16	
Spring clamp	V17	
PCB		V18

For more detailed technical specifications, drawings and ordering information, go to the product page on [www.morssmitt.com](http://www.morssmitt.com)

 **Over 10 million Mors Smitt relays in use in applications worldwide!**

**Mors Smitt Asia Ltd.**  
 Unit B & C, 25/F., Casey Aberdeen House,  
 38 Heung Yip Road, Wong Chuk Hang,  
 Hong Kong  
 Tel: +852 2343 555  
[sales.msa@wabtec.com](mailto:sales.msa@wabtec.com)

**Mors Smitt France SAS**  
 2 Rue de la Mandinière  
 72300 Sablé-sur-Sarthe, France  
 Tel: +33 (0) 243 92 82 00  
[sales.msf@wabtec.com](mailto:sales.msf@wabtec.com)

**Mors Smitt UK Ltd.**  
 Graycar Business Park,  
 Burton on Trent, DE13 8EN, UK  
 Tel: +44 (0)1283 357 263  
[sales.msuk@wabtec.com](mailto:sales.msuk@wabtec.com)

**Wabtec Netherlands**  
 Darwinstraat 10,  
 6718 XR Ede, Netherlands  
 Tel: +31 (0)88 600 4500  
[sales.msbv@wabtec.com](mailto:sales.msbv@wabtec.com)

**Mors Smitt Technologies Ltd.**  
 1010 Johnson Drive,  
 Buffalo Grove, IL 60089-6918, USA  
 Tel: +1 847 777 6497  
[salesmst@wabtec.com](mailto:salesmst@wabtec.com)

**RMS Mors Smitt**  
 6 Anzed Court,  
 Mulgrave, VIC 3170, Australia  
 Tel: +61 (0)3 8544 1200  
[sales.rms@wabtec.com](mailto:sales.rms@wabtec.com)

(c) Copyright 2020

All rights reserved. Nothing from this edition may be multiplied, or made public in any form or manner, either electronically, mechanically, by photocopying, recording, or in any manner, without prior written consent from Mors Smitt. This also applies to accompanying drawings and diagrams. Due to a policy of continuous development Mors Smitt reserves the right to alter the equipment specification and description outlined in this datasheet without prior notice and no part of this publication shall be deemed to be part of any contract for the equipment unless specifically referred to as an inclusion within such contract. Mors Smitt does not warrant that any of the information contained herein is complete, accurate, free from potential errors, or fit for any particular purpose. Mors Smitt does not accept any responsibility arising from any party's use of the information in this document.

## Technical specifications

## Instantaneous relay CU/CP-G/W

### Coil characteristics

Operating times at nominal voltage (typical)	
Pull-in time	≤ 15 ms
Release time	≤ 4 ms
Bounce time N/O contacts	≤ 1 ms
Bounce time N/C contacts	≤ 1 ms
Inductance L/R at Unom (typical value):	6 ms
Operating voltage range	80 %...110 % Unom

Type	Unom (VDC)	Umin (VDC)	Umax (VDC)	Udrop-out (VDC)	Rcoil * (Ω)
G38	12	9.6	13.2	1.2	390
G32	24	19.2	26.4	2.4	1550
G28	38	30.4	41.8	3.8	3800
G26	48	38.4	52.8	4.8	6306
G22	72	57.6	79.2	7.2	15371
G20	110	88.0	121.0	11.0	22630

Type	Unom (VAC)	Umin (VAC)	Umax (VAC)	Udrop-out (VAC)	Rcoil * (Ω)
W41	24	19.2	26.4	2.4	1550
W34	48	38.4	52.8	4.8	3800
W32	60	48.0	66.0	6.0	6306
W28	100	80.0	110.0	10.0	15371
W22	220	176.0	242.0	22.0	22630

Other types on request

\* The Rcoil is measured at room temperature and has a tolerance of ± 10%

#### Remarks:

- Umin is the must-operate voltage at which the relay has picked up in all circumstances (worst-case situation), in practice the relay picks up at a lower voltage
- Udrop-out is the must-release voltage at which the relay has dropped-out in all circumstances (worst-case situation), in practice the relay drops out at a higher voltage
- Always select the nominal voltage as close as possible to the actual voltage in the application
- AC voltages: 50/60 Hz

### Contact characteristics

Amount and type of contacts	2 C/O
Maximum make current	15 A
Maximum continuous current	6 A
Maximum switching voltage	300 VDC (then max. current = 300 mA) 250 VAC (then max. current = 2.6 A)
Minimum switching voltage	12 V
Minimum switching current	10 mA
Contact resistance	15 mΩ (initial)
Maximum switching capacity	See page 6
Material	Ag
Contact gap	0.3 mm
Contact force	> 20 cN

Note: contacts cannot have a different position (forced contacts, weld-no-transfer)

## Instantaneous relay CU/CP-G/W

### Electrical characteristics

Dielectric strength	Pole-pole	4 kV, 50 Hz, 1 min
	Cont-coil	3.5 kV, 50 Hz, 1 min
	Open contacts	1 kV; 50 Hz; 1 min
Pulse withstanding	IEC 60255-5	5 kV (1.2/50 µs)

### Mechanical characteristics

Mechanical life	30 x 10 <sup>6</sup> operations (10 x 10 <sup>6</sup> operations for AC coil)	
Maximum switching frequency	Mechanical: 3600 ops/h Electrical: 1200 ops/h	
Weight	40 g	

### Environmental characteristics

Environmental	EN 50125-1 and IEC 60077-1	
Vibration	IEC 61373, Category I, Class B, Body mounted	
Shock	IEC 61373, Category I, Class B, Body mounted	
Operating temperature	-50 °C...+85 °C	
Humidity	95% (condensation is permitted temporarily)	
Maximum altitude	2000 meter. Higher altitudes are possible but have consequences mentioned in IEC 60664 (for example 5000 meter with bigger clearance distance)	
Salt mist	IEC 60068-2-11, class ST4	
Damp heat	IEC 60068-2-30, Test method Db variant 1	
Protection	IEC 60529, IP40 (relay on socket)	
Fire & smoke	NF F 16-101, NF F 16-102, EN 45545-2: HL3 for requirements R22, R23, R26	
Insulation materials	Cover: polycarbonate Base: polyester	

### Industry compliancy

IEC 61810	Electromechanical elementary relays
IEC 60947	Low voltage switch gear and control gear
IEC 60947-5-1	Electromechanical control circuit devices and switching elements
IEC 60255	Relay design and environmental conditions
CE	

## Instantaneous relay CU/CP-G/W


### Options

Code	Description	Remark	Cannot be combined with:
Standard options:			
E*	Au; Gold plated contacts (10 µm)		
Lg	Green LED	Only CU version	
Lr	Red LED	Only CU version	

* Gold plated contacts characteristics	
Material	Ag, 10 µm gold plated
Maximum switching voltage	60 V (higher voltages may be possible, contact Mors Smitt for more information)
Maximum switching current	400 mA (at higher rate gold will evaporate, then the standard silver contact rating of minimum 10 mA and 12 V is valid)
Minimum switching voltage	5 V
Minimum switching current	1 mA

Remark: For application support or technical product support, contact your local Mors Smitt sales office (see contact details on last page).


Example LED in CU relays:

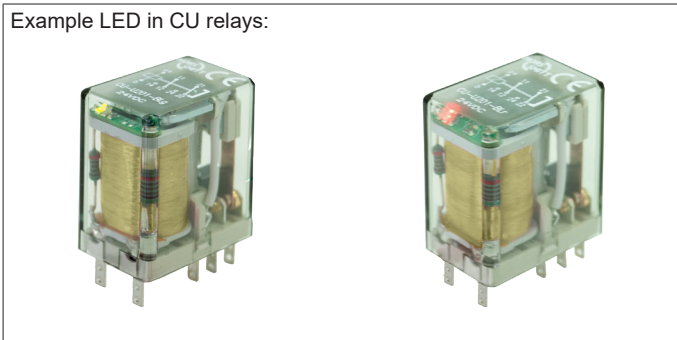


## Instantaneous relay CU/CP-G/W

### Switching capacity and contact life

Maximum switching capacity

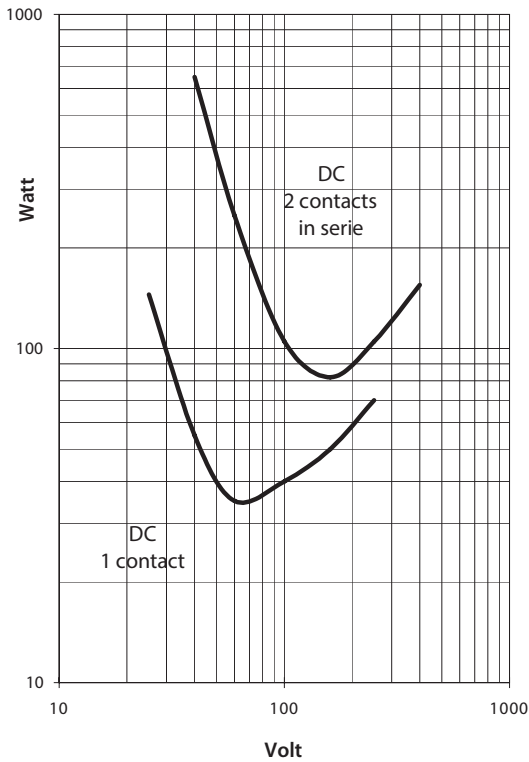

Electrical life expectancy

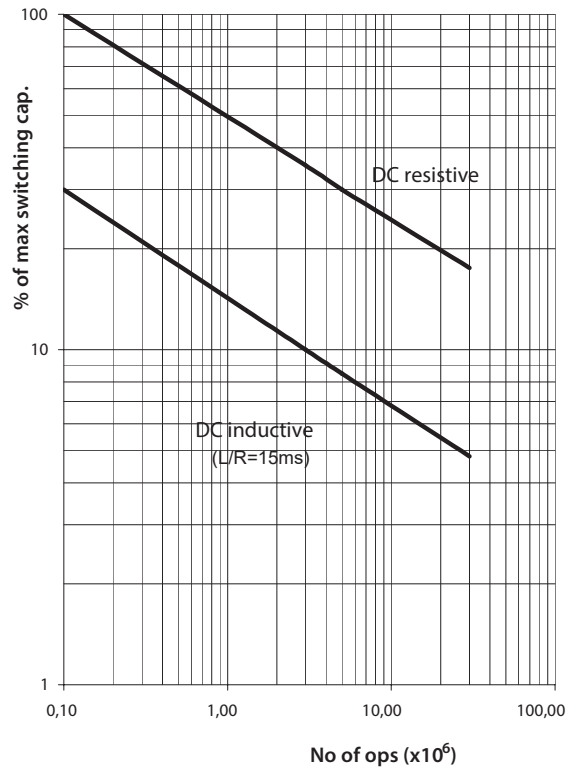

- Step 1: Determine switching voltage out of the application.
- Step 2: Select the maximum switching capacity (in Watt) at this voltage in graph 'Maximum switching capacity'.
- Step 3: Calculate the actual switched load (in Watt) out of the application.
- Step 4: Calculate the % of maximum switching capacity:  $\frac{\text{Actual load}}{\text{Max switching capacity}}$
- Step 5: Pick the life at this load out of the graph 'Electrical life expectancy'.

## Instantaneous relay CU/CP-G/W

### Mounting possibilities/sockets



The CU/CP relays can be mounted in any position except with the connecting pins pointing upwards.

Relays and sockets are all tested to the IEC 61373. For rail mounting it is recommended to mount the socket with the spring side down (that means contacts 14-12-22-24 upwards).



338001500	V16	Relay socket, screw terminal, wall/rail mount, front connection
338001400	V17	Relay socket, spring terminal, wall/rail mount, front connection
338000620	V18	Relay socket for soldering on PCB

Optional: Diode / double zener diode in the socket.

For more details see datasheets of the sockets on [www.morssmitt.com](http://www.morssmitt.com)

## Instantaneous relay CU/CP-G/W

### Mechanical keying relay and socket (optional)

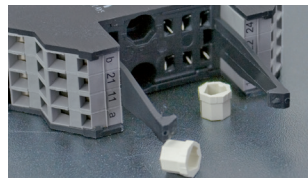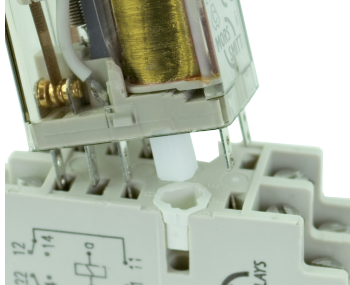


**Function:**

- To prevent wrong installation
- To prevent damage to equipment
- To prevent unsafe situations

Using keyed relays and sockets prevents a relay is inserted in a wrong socket. For example it prevents that a 24 VDC relay is put in a 110 VDC circuit. Positive discrimination is possible per different function, coil voltage, timing, monitoring, safety and non-safety.

The CU-relay socket keying option gives 8 possibilities. Upon ordering the customer simply indicates the need for the optional keying. Mors Smitt will assign a code to the relay and fix the pins into the relay. Loose key receptacles can be ordered as well when sockets without pre-installed keys need keying. Inserting the keys into the socket is very simple and self explaining.

Remark: Sockets and relay shown are examples.

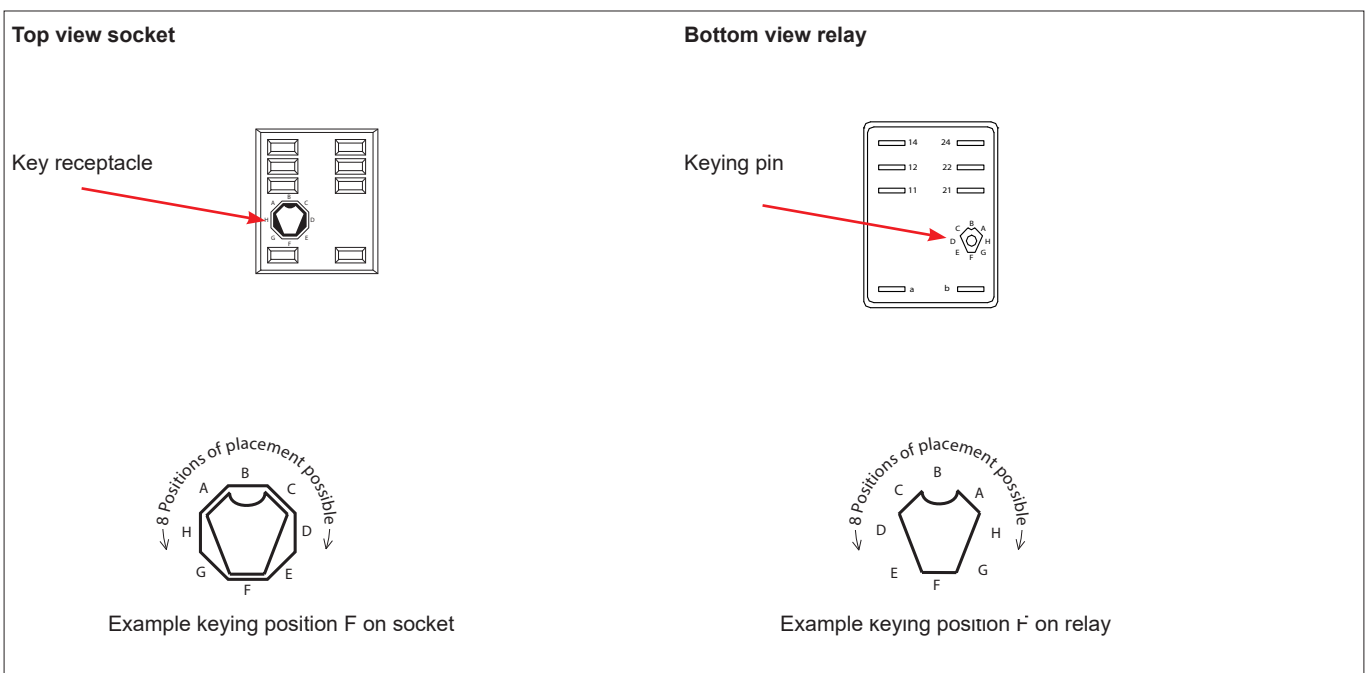



## Instantaneous relay CU/CP-G/W

### Important for relay selection and operation

Make sure the relay is suitable for the application. For critical applications (for example: green loop applications) relays should be checked on correct working during periodic inspection.

### Recommendations for long time contact reliability

For relays to enable failure free performance over a very long operational time, it is important to create the right circumstances. In any relay, contact usage and atmospheric conditions influence the contact surface. To counter this effect it is common practice to use a safety factor of  $> 2$  to ensure long time contact reliability.

Therefore for long time contact reliability we recommend:

- Silver contacts: a minimum contact current of 20 mA per contact
- Gold contacts: a minimum contact current of 10 mA per contact
- Double Make Double Break contacts: a minimum contact current of 40 mA per contact
- When low currents are switched and not frequently, e.g. 10 mA once a day, it is advised next to gold plated contacts to put similar contacts within the same relay in parallel
- With higher load switching, e.g. 110 VDC and  $> 1$  A, put relay contacts in series
- Rule of thumb: any relay works best with switching currents  $> 20$  mA in DC environment when frequently switched. When not switched frequently a higher switching current like 50 mA is better for a long reliable operational time
- Check relays regularly

### Instructions for use

#### Installation

Before installation or working on the relay: disconnect the power supply first. Install socket and connect wiring according to the terminal identification. Plug relay into the socket ensuring there is no gap between the bottom of relay and the socket. Reverse installation into the socket is not possible due to the mechanical blocking of the standard keying inside CU-relays. Check to ensure that the coil connection polarity is not reversed. Relays can be mounted tightly together to save space.

#### Warning!

- Never use silicon in the proximity of the relays
- Do not use the relay in the presence of flammable gas as the arc generated from switching could cause ignition
- Relays should never be swapped to other circuit positions when taken out of its socket for inspection or fault finding, always place it back into the original position to prevent contact resistance problems. Contact resistance problems can be created when swapping relays between different circuit loads due the contact wear/condition having changed during its operational life.

#### Operation

After installation always apply the rated voltage to the coil to check correct operation. Long term storage may corrode the silver on the relay pins. When plugging the relay into the socket, the female bifurcated or trifurcated receivers will automatically cut through the corrosion on the pins and guarantee a reliable connection.

Before actual use of relays, it is advised to switch the load several times with the contacts. The contacts will both be electrically and mechanically cleaned due to the positive wiping action. Sometimes a contact can build up increased contact resistance ( $\leq 15$  m $\Omega$  when new). When using silver contacts one can clean the contact by switching a contact load a few times using  $>24$  VDC &  $\sim 2$ A. Increased contact resistance is not always problematic, as it depends on circuit conditions. In general a contact resistance of 1  $\Omega$  is no problem, consult Mors Smitt for more information.

Condensation in the relay is possible when the coil is energised (warm) and the outside, environmental temperature is cold. This is a normal phenomenon and will not affect the function of the relay. Materials in the relay have no hygroscopic properties.

#### Inspection / maintenance

Correct operation of the relay can easily be checked as the transparent cover provides good visibility of the moving contacts. If the relay does not seem to operate correctly, check for presence of the appropriate coil voltage and polarity using a suitable multimeter. If a LED is fitted, it indicates voltage presence to the coil. If coil voltage is present, but the relay does not operate, a short circuit of the suppression diode is possible (This may have been reversed due to the coil connection).

Relays can easily be tested with the Mors Smitt Relay Tester. More information on: [www.morssmitt.com](http://www.morssmitt.com).

If the relay doesn't work after inspection, replace the relay unit with a similar model. Do not attempt to open the relay cover or try to repair. Contacts are calibrated and in balance, touching can affect proper operation. Also resoldering may affect correct operation. Since 2009 relays have tamper proof seals fitted and once broken, warranty is void.

Most relay defects are caused by installation faults such as overvoltage, spikes/transients, high/short current far exceeding the relay specifications. When returning the relays for investigation, please provide all information on the RMA form. Send defective relays back to the manufacturer for repair or replacement. Normal wear and tear or external causes are excluded from warranty.

RMA procedure see [www.morssmitt.com](http://www.morssmitt.com)

## Instantaneous relay CU/CP-G/W

### Ordering scheme

C			-		-	
Relay model	<b>U</b>					Plug-in model
	<b>P</b>					PCB model
Coil		<b>G38</b>				12 VDC
		<b>G32</b>				24 VDC
		<b>G28</b>				38 VDC
		<b>G26</b>				48 VDC
		<b>G22</b>				72 VDC
		<b>G20</b>				120 VDC
		<b>W41</b>				24 VAC, 50/60 Hz
		<b>W34</b>				48 VAC, 50/60 Hz
		<b>W32</b>				60 VAC, 50/60 Hz
		<b>W28</b>				100 VAC, 50/60 Hz
		<b>W22</b>				120 VAC, 50/60 Hz
					<b>E</b>	Gold plated contacts
					<b>Lg</b>	Green LED
					<b>Lr</b>	Red LED

Upon ordering indicate keying if necessary.

Example: CU-G32-E

Description: C relay, plug-in model, Unom: 24 VDC, gold plated contacts

**Instantaneous relay**  
**CU/CP-G/W**

 **Over 10 million Mors Smitt relays in use in rail transport applications worldwide!**

**Mors Smitt Asia Ltd.**  
Unit B & C, 25/F., Casey Aberdeen House,  
38 Heung Yip Road, Wong Chuk Hang,  
Hong Kong  
Tel: +852 2343 555  
sales.msa@wabtec.com

**Mors Smitt France SAS**  
2 Rue de la Mandinière  
72300 Sablé-sur-Sarthe, France  
Tel: +33 (0) 243 92 82 00  
sales.msf@wabtec.com

**Mors Smitt UK Ltd.**  
Graycar Business Park,  
Burton on Trent, DE13 8EN, UK  
Tel: +44 (0)1283 357 263  
sales.msuk@wabtec.com

**Wabtec Netherlands**  
Darwinstraat 10,  
6718 XR Ede, Netherlands  
Tel: +31 (0)88 600 4500  
sales.msbv@wabtec.com

**Mors Smitt Technologies Ltd.**  
1010 Johnson Drive,  
Buffalo Grove, IL 60089-6918, USA  
Tel: +1 847 777 6497  
salesmst@wabtec.com

**RMS Mors Smitt**  
6 Anzed Court,  
Mulgrave, VIC 3170, Australia  
Tel: +61 (0)3 8544 1200  
sales.rms@wabtec.com

(c) Copyright 2020

All rights reserved. Nothing from this edition may be multiplied, or made public in any form or manner, either electronically, mechanically, by photocopying, recording, or in any manner, without prior written consent from Mors Smitt. This also applies to accompanying drawings and diagrams. Due to a policy of continuous development Mors Smitt reserves the right to alter the equipment specification and description outlined in this datasheet without prior notice and no part of this publication shall be deemed to be part of any contract for the equipment unless specifically referred to as an inclusion within such contract. Mors Smitt does not warrant that any of the information contained herein is complete, accurate, free from potential errors, or fit for any particular purpose. Mors Smitt does not accept any responsibility arising from any party's use of the information in this document.